


SHIPPING & HANDLING INFORMATION

		72 cell				60 cell			
Container Ft.		Pallets	Panels	340 W	360 W	Pallets	Panels	295 W	305 W
53'	Double stack	30	780	265.20 kW	280.80 kW	36	936	276.12 kW	285.48 kW
40'	Double stack	24	624	212.16 kW	224.64 kW	28	728	214.76 kW	222.04 kW
Pallet	Panels 26	Weight	Height	Length	Width	Weight	Height	Width	Length
	20	1,400 lbs	45.15"	78.50"	45.00"	1,160 lbs	45.15"	45.00"	66.00"

COMPLETE PALLET

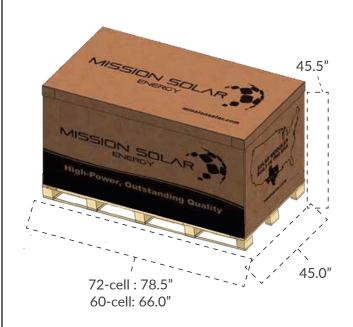

EXPLODED PALLET



STORAGE TRANSPORT INSTRUCTIONS



Use caution when moving modules around warehouse or job site. Do not exceed rated load capacity of forklift. Only transport a double-stacked pallet if it is well aligned. Do not collide with other objects while transporting modules. Only use fork lifts with long forks (at least 72" or 6') to move the pallets.



Fragile! Modules should be handled carefully. Do not place modules roughly on hard surface or on their corners. Do not drag modules over each other when unstacking.



The package must always be transported, handled and stored in such a way that the arrows always point upwards.



Do not step or stand on modules. Do not place any objects on modules.



The cardboard sleeve and package materials are recyclable.



Package and modules should be protected from excessive moisture (rain, snow, etc.) and must accordingly be stored under cover. If package and modules cannot be stored in warehouses or sheds, they must be carefully covered with tarpaulins.



Never stack more than 2 pallets high. Double-stacked pallets need to have anti-slip pads between pallets.



Use two people when unpacking modules from pallet. When handling modules always use both hands and safety gloves.



Do not use forklift truck on glass side.

8303 South New Braunfels Ave. | San Antonio | TX | 78235 | missionsolar.com | info@missionsolar.com | (210) 531-8600